



INSTALLATION

Mirror Adaptors for Yamaha

1413

PARTS INCLUDED

- 1 5/16-18 to M10-1.25 Left Handed Threaded Stud
- 1 5/16-18 to M10-1.25 Right Handed Threaded Stud
- 1 M10-1.25 Jam Nut Left Hand Thread
- 1 M10-1.25 Jam Nut Right Hand Thread
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED


Set of Hex Wrenches, Metric and Standard Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

Right Side Mirror

STEP 2 Place a drop of Red Loctite on the end of the adapter that threads into the mirror and thread the M10-1.25 adapter with right hand threads into the stem of the right side mirror that you are mounting to the bike until it bottoms. **DO NOT exceed 20 foot pounds of torque** when tightening the adapter to the mirror stem. Secure with set screw if applicable to your mirrors. PIC 1

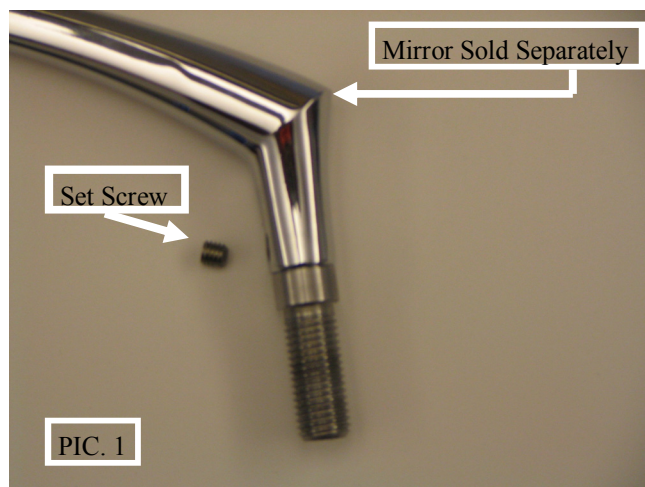

-cont.-

1413-21MC-0311

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



kuryakyn.com



STEP 3 Thread the jam nut with right hand threads to opposite end of adapter until loosely seated against stop. PIC 2

STEP 4 Thread mirror and adapter assembly to mounting point on right side of bike until loosely seated. Back (unthread) the assembly out to the desired vision position.

STEP 5 Thread jam nut down adapter to the stock mirror mounting point. Finger tighten. PIC 3

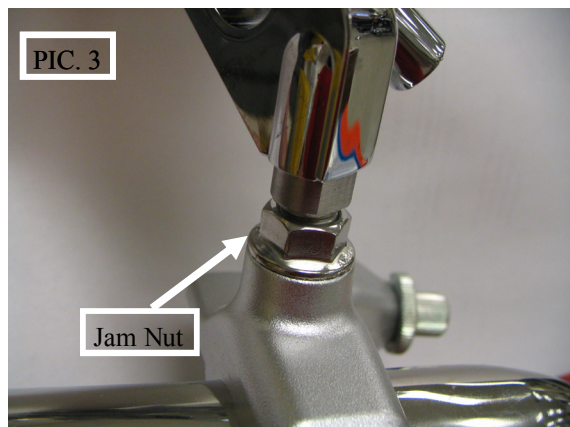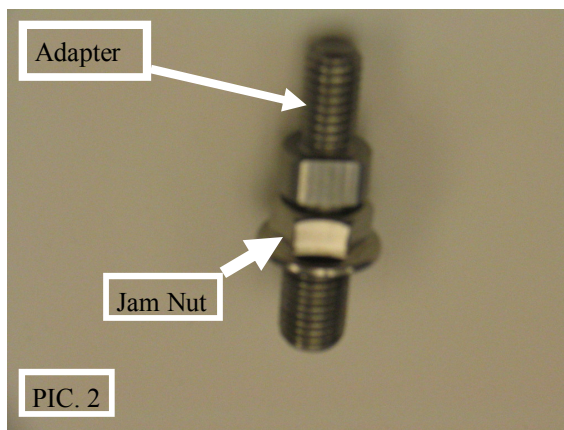

STEP 6 Holding the adapter with a wrench in adjusted position, tighten jam nut to the stock mirror mounting point.

Left Side Mirror

STEP 7 Place a drop of Red Loctite on the end of the adapter that threads into the mirror and thread the M10-1.25 adapter with left hand threads into the stem of the left side mirror that you are mounting to the bike until it bottoms. **DO NOT exceed 20 foot pounds of torque** when tightening the adapter to the mirror stem. Secure with set screw if applicable to your mirrors. PIC 1

STEP 8 Thread mirror and adapter assembly to the stock mirror mounting point on left side of bike until loosely seated.

STEP 9 Thread jam nut down adapter to mounting point. Finger tighten. PIC 3

STEP 10 Thread mirror and adapter assembly to mounting point on left side of bike until loosely seated. Back (unthread) the assembly out to the desired vision position.

STEP 11 Holding the adapter with a wrench in adjusted position, tighten jam nut to the stock mirror mounting point.

STEP 12 Tighten all fasteners.

ATTENTION!

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

Ride On!